

## Replacing the cutter assembly

- Tools: T8 screwdriver
- After opening the cover move the carriage to the left into the gap position where you replace your printheads normally
- Open printhead cover, remove them and close it...
- Move carriage to the right, disconnect tubes from printheads
- Slide tube assembly towards you
- Push blue button above printhead compartment and slide tube assy to left, you have access to the cutter now
- Remove T8 screw plus washer
- Slide cutter assembly towards you
- Insert new cutter assembly and follow instructions backwards:
  - Slide cutter inwards, fasten cutter assy
  - Slide tube assy to right and snap, fasten it at blue button location
  - Snap tube assy back in carriage
  - Move carriage to left, put in printheads, move carriage to right and presto!

© 2008 Wiebe van der Worp, Permission is granted to copy, distribute and/or modify this document under the terms of the GNU Free Documentation License, Version 1.2 or any later version published by the Free Software Foundation.